



Installation Instructions


Step 1: Insert strain relief body to male DiveCAN cable and strain relief cap to female DiveCAN cable or vice versa.



Step 2: Insert one plastic ring on each of the cable connector.



Step 3: Align the rings to the step of each cable connector.

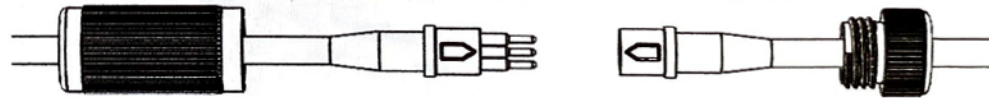

Step 4: Connect both DiveCAN male and female cables then tighten both strain relief body and cap.

